


ADVANCED SUBSIDIARY (AS) General Certificate of Education 2012

Physics



[AY132]

MONDAY 14 MAY, MORNING

TIME

1 hour 30 minutes.

INSTRUCTIONS TO CANDIDATES

Write your Centre Number and Candidate Number in the spaces provided at the top of this page. Turn to page 2 for further Instructions and Information.

Question	Marks	
Number	Teacher Mark	Examiner Check
1		
2		
3		
4		
5		
Total Marks		

7616

Ce	ntre	Number
71		

Candidate Number



INSTRUCTIONS TO CANDIDATES

Answer **all** the questions in this booklet. Rough work and calculations must also be done in this booklet. Except where instructed, do **not** describe the apparatus or experimental procedures. The Teacher/Supervisor will tell you the order in which you are to answer the questions. One hour is to be spent on Section A and 30 minutes on Section B.

Section A consists of four short experimental tests. You will have access to the apparatus for 13 minutes for each of the tests. At the end of this 13-minute experimental period there is a 2-minute changeover to the area set aside for the next test. Any spare time before the start of the next test may be used to write up anything you have not yet completed.

At the end of your Section A work you will be told to move to the area set aside for Section B. Section B consists of one question in which you will analyse a set of experimental results.

INFORMATION FOR CANDIDATES

The total mark for this paper is 40.

Section A and Section B carry 20 marks each.

Figures in brackets printed down the right-hand side of pages indicate the marks awarded to each part question.

You may use an electronic calculator.

BLANK PAGE

(Questions start overleaf)

Section A

Examiner Only Marks Rema

[1]

1 (a) (i) Use the metre rule and blocks of wood provided to measure the diameter of the table tennis ball. You are only expected to take one measurement at this stage.

delta delt

(b) Determine the mass of the table tennis ball. Place the table tennis ball into the small beaker to prevent it rolling off the scales.


Mass = _____ g

You are provided with the circuit shown in Fig. 2.1, a third component Examiner Only Marks Remark labelled Q, a voltmeter, a milliammeter and additional connecting wires. Throughout this question, push and hold the switch closed as measurements are taken. (a) The circuit shown in Fig. 2.1 has been set up for you. Ρ R Fig. 2.1 (i) Measure the current flowing in the circuit by using the milliammeter provided. Current = _____ mA [1] (ii) Measure the potential difference (P.D.) across component P by using the voltmeter provided. P.D. = _____ V [1]

2

(b) Adapt the circuit provided to set up the circuit as shown in **Fig. 2.2**. Take care to ensure the polarity of component Q is as shown.

Examiner Only Marks Remark

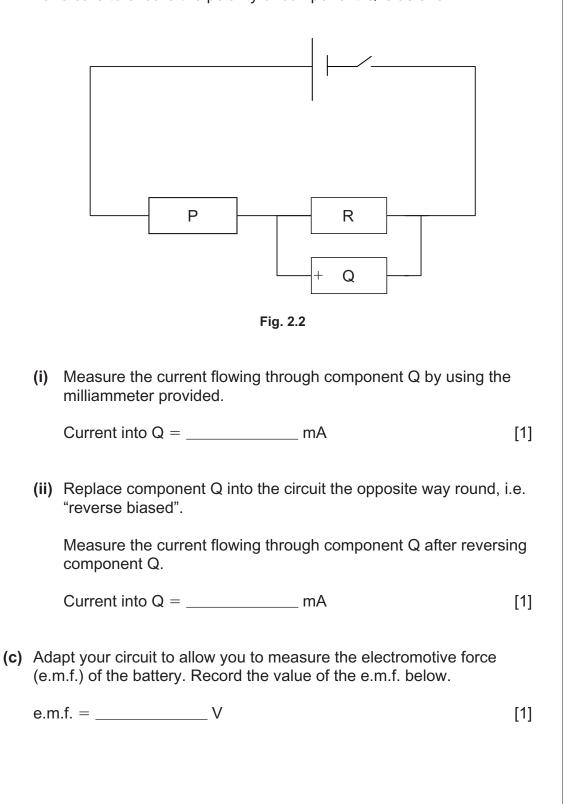

3 (a) The pendulum arrangement as shown in Fig. 3.1a is provided. Adjust the length of the pendulum until the centre of mass of the bob is 0.350 m from the point of suspension. Use the 90° set square to assist, see Fig. 3.1a. The curved arrows on Fig. 3.1b represent a single oscillation, i.e. A → B → A.

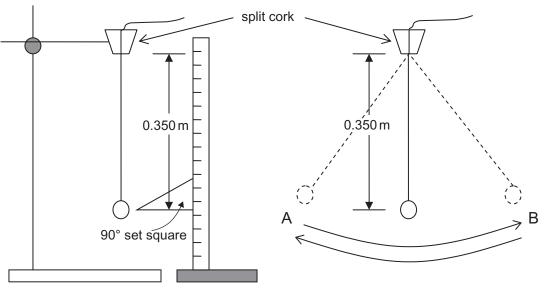


Fig. 3.1a



You are to determine an **accurate** value for the periodic time of the simple pendulum of length 0.350 m. Periodic time is defined as the time taken for one oscillation and has the S.I. unit "second" (s).


Take readings that will allow an accurate value for the periodic time of the pendulum to be determined. **Tabulate all readings** taken in the space below.

Periodic time = _____s

[5]

Examiner Only

Marks Remark

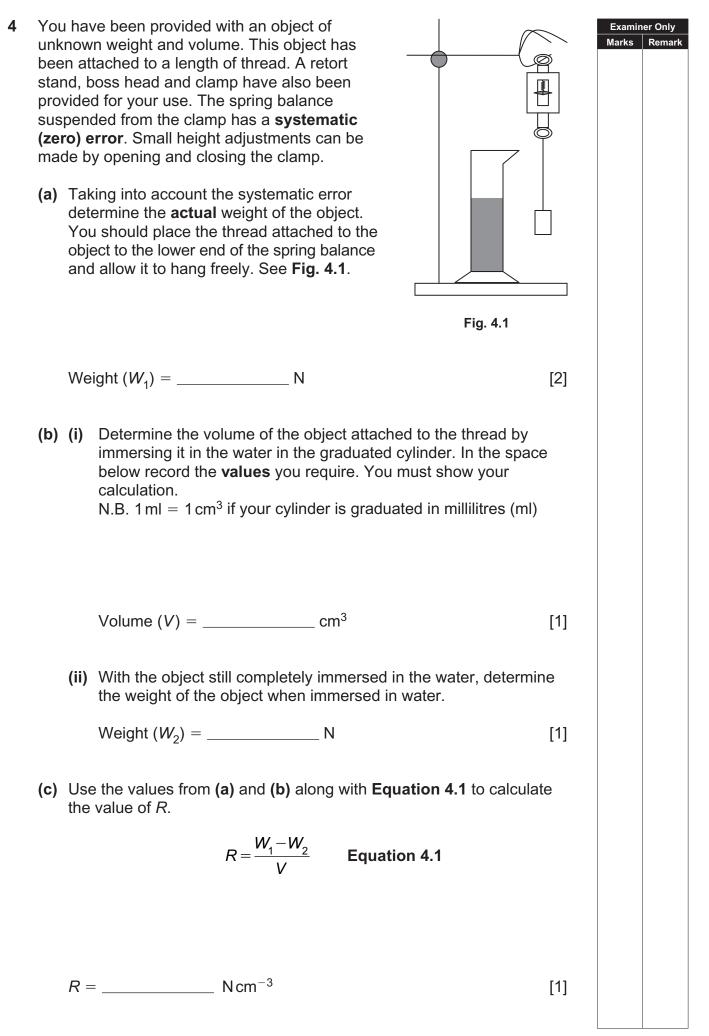

Section B

- **5** Many governments and private companies are sponsoring research into the generation of electrical energy from wind.
 - (a) The electrical power output from a wind turbine for a variety of wind speeds is recorded in **Table 5.1**.

Wind speed/	Electrical Power Output/kW			
m s ⁻¹	Trial 1	Trial 2	Trial 3	Average
5.32	46.9	45.7	47.2	46.6
7.55	134	132	137	
8.28	176	177	174	176
10.7	381	383	380	381
12.6	623	621	623	622
14.4	632	932	931	932

Table 5.1

(i) To how many significant figures are all the values given in **Table 5.1**?

Number of significant figures = _____ [1]

- (ii) Complete **Table 5.1** by calculating the average electrical power output for a wind speed of $7.55 \,\mathrm{m\,s^{-1}}$ and inserting the value, to the correct number of significant figures, into the table. [1]
- (iii) Consider the electrical power output values for wind speed $14.4\,\mathrm{m\,s^{-1}}$. State whether or not a mistake has been made in calculating the average and explain your answer.

[2]

Examiner Only Marks Remark The relationship between electrical power output (P) and wind speed (v) is given by **Equation 5.1**

 $P = kv^n$ Equation 5.1

where *k* and *n* are constants.

In **Fig. 5.1**, logarithms (log) of *P* and *v* are plotted. You do not need to know anything about logarithms in order to complete this question.


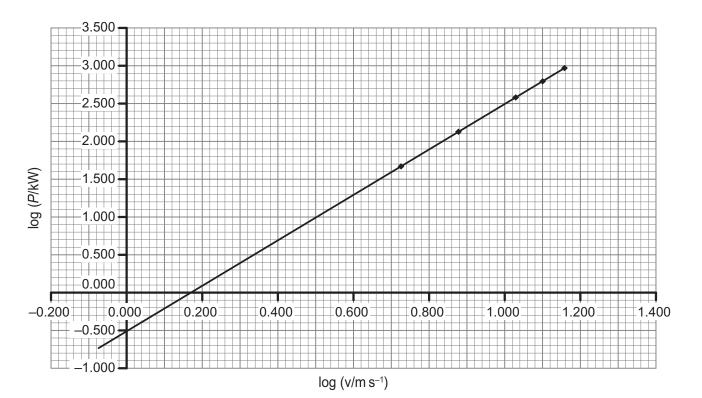


Fig. 5.1

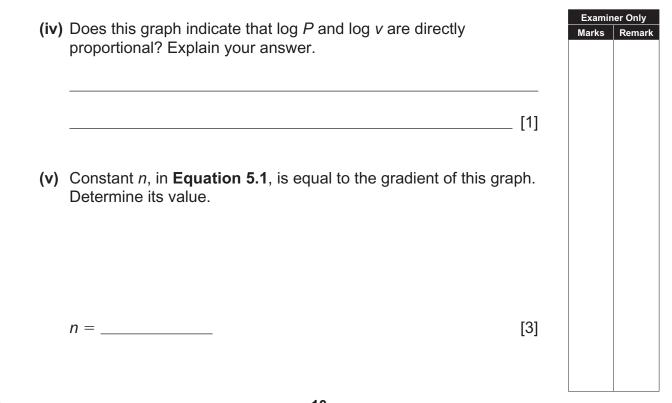

Constant x may be determined using Equation 3.2		Marks	Remark
$k = 10^c$ Equation 5.2			
where <i>c</i> is the intercept on the vertical axis of the graph in Fig. 5.1 .			
Calculate the magnitude of constant <i>k</i> .			
$k = $ $kg m^{-1}$	[2]		
11		[Tur	n ove

(vi) Constant k may be determined using Equation 5.2

Examiner Only

(b) The electrical power output from the wind turbine also depends on the diameter of the turbine blades. **Table 5.2** provides data on this relationship.

Examiner Only

Marks Remark

	Table 5.2	
Turbine	Blade Diameter <i>d</i> /m	Electrical Power <i>P</i> /kW
А	7.4	8.3
В	14.8	33.2
С	22.2	74.7
D	29.6	
E	37.0	208
 For turbines A and Calculate the ratio 	atio Blade diameter tur Blade diameter tur	rbine A
Ratio =		[1]
2. Calculate the ra	atio $\frac{Electrical power tu}{Electrical power tu}$	
Ratio =		[1]
	ctrical power are related $P \propto d^{\chi}$ Relationshi	
here x is a constant.		
	(b)(i) and/or by perform	
 Use your answer to establish a numerio 		ming other calculations,

Power *P* = _____ kW

[Turn over

Examiner Only Marks Remark

[2]

(c) The maximum harvestable power P_{max} that can be extracted from the wind has a theoretical limit called the Betz Limit. Equation 5.4 gives the relationship for the maximum harvestable power

 $P_{\rm max} = \frac{\pi}{8} \rho B_{\rm c} Z$ Equation 5.4

Examiner Only Marks Remark

where ρ is the air density, *Z* is a constant and $B_{\rm c}$ is the Betz coefficient.

Table 5.3 provides values for some of the quantities in **Equation 5.4** along with the uncertainty in those values.

Quantity	Value	Uncertainty	
Quantity	Value	Absolute	Percentage
P _{max}	656 kW	±26kW	
ρ	1.29 kg m ⁻³		±3%
Z	$2.18 imes 10^{6}~{ m m^{5}~s^{-3}}$	$\pm5 imes10^4~\mathrm{m^5~s^{-3}}$	±2%

- (i) Complete Table 5.3 by
 - calculating the percentage uncertainty for P_{max} and entering it in Table 5.3 [1]
 - 2. calculating the absolute uncertainty for ρ and entering it in **Table 5.3** [1]
- (ii) Calculate the value for the Betz coefficient B_c and state its percentage uncertainty.

*B*_c = _____

Uncertainty = _____ %

[3]

THIS IS THE END OF THE QUESTION PAPER

Permission to reproduce all copyright material has been applied for. In some cases, efforts to contact copyright holders may have been unsuccessful and CCEA will be happy to rectify any omissions of acknowledgement in future if notified.



ADVANCED SUBSIDIARY (AS) General Certificate of Education 2012

Physics

Assessment Unit AS 3

assessing

Practical Techniques Sessions 1 and 2

[AY131] [AY132]

FRIDAY 11 MAY AND MONDAY 14 MAY



APPARATUS AND MATERIALS LIST

PHYSICS UNIT 3 (AS 3) APPARATUS AND MATERIALS REQUIRED FOR PRACTICAL ASSESSMENTS

CONFIDENTIAL

Information about the apparatus and materials required for the AS Practical Assessments **must not** be communicated to candidates sitting the examination.

This document gives preliminary information on the apparatus and materials required for the AS Practical Assessments. The Practical Assessments will be marked by teachers as part of the internal assessment requirements for the GCE Physics Specification.

Teachers will be given detailed instructions for setting up the experiment in the *Confidential Instructions for Physics (Advanced Subsidiary) Practical Tests*, to which they will have confidential access from March 2012.

Teachers will have confidential access to a copy of the experimental tests two working days (48 hours) before the start of the assessment.

The AS 3 Practical Techniques Assessment is a test of practical skills consisting of Section A and Section B. Section A is comprised of 4 short experimental tests (20 marks) and Section B consists of one question requiring the analysis of experimental results (20 marks). The duration of the assessment is 1 hour 30 minutes. Some of this time will be set aside for supervisors to re-set the apparatus ready for the next candidates. **All** candidates should attempt Section A of the AS 3 assessment first followed by Section B. Section A of the assessment should be run as a circus of experiments with candidates moving to the next experiment at the designated time. The assessment should be timed as follows:

Section A	Time
Q1 (Short practical test)	13 minutes
Changeover and practical write-up	2 minutes
Q2 (Short practical test)	13 minutes
Changeover and practical write-up	2 minutes
Q3 (Short practical test)	13 minutes
Changeover and practical write-up	2 minutes
Q4 (Short practical test)	13 minutes
Changeover and practical write-up	2 minutes
Section B	Time
Question on the analysis of experimental results	30 minutes

In Section A, at the end of each 13 minute period, candidates must stop using the apparatus. During each 2 minute changeover period candidates may write up anything they have not completed however they will not have access to the apparatus.

The apparatus in the following list will allow for **one experiment** to be set up for each of the short practical tests which make up questions 1–4. In other words, each set of apparatus (as listed on pages 4 and 5) will accommodate four candidates when doing part A as a circus of experiments.

The apparatus can be used for alternative sessions according to the following schedule:

Friday 11 May 2012 Physics AS 3A (AY131)

(Main Session) **9.15 a.m. – 10.45 a.m.** (First Alternative) **11.00 a.m. – 12.30 p.m.** (Second Alternative) **1.15 p.m. – 2.45 p.m.** (Third Alternative) **3.00 p.m. – 4.30 p.m.**

Monday 14 May 2012 Physics AS 3B (AY132)

(Main Session) **9.15 a.m. – 10.45 a.m.** (First Alternative) **11.00 a.m. – 12.30 p.m.** (Second Alternative) **1.15 p.m. – 2.45 p.m.** (Third Alternative) **3.00 p.m. – 4.30 p.m.**

One set of apparatus for AS 3A (AY131) will therefore be sufficient for sixteen candidates on **11 May** if the Main Session and all three alternatives are used. Similarly, one set of apparatus for AS 3B (AY132) will be sufficient for sixteen candidates on **14 May** if the Main Session and all three Alternatives are used. A laboratory may contain one, two, three or more sets of apparatus. This means that four, eight, twelve or more candidates can be accommodated in the same session. When alternative sessions are used care must be taken to segregate candidates who have taken the examination from those who have still to sit the examination.

IMPORTANT NOTICE

Centres are urged to order items needed for the Physics Practical Tests from the suppliers as soon as possible.

Session 1

The following list of apparatus for Questions **1–4** is sufficient to equip one experimental station.

	Session 1	Session 2
Question 1		
1.1 Golf ball (new and R&A and USGA approved)	1	Х
1.2 Table tennis ball (new and ITTF approved)	Х	1
1.3 Vernier callipers (analogue, accurate to 0.01 cm)	1	1
1.4 Scales (electronic, accurate to 0.01 g)	1	1
1.5 Glass beaker (100 ml)	1	1
1.6 Wooden block (straight edges; bigger in size than 1.1 or	1.2) 2	2
Question 2		
2.1 Cell (providing ~1.5 V)	1	1
2.2 Cell holder (suitable for cell)	1	1
2.3 Push-to-make switch (e.g. Philip Harris B8H30798)	1	1
2.4 4 mm sockets (single colour)	6	6
2.5 Component channels (boxes)	3	3
2.6 Diode (e.g. Rapid 47-3154)	1	1
2.7 75 Ω resistor (1% tolerance, 0.6 W, e.g. Rapid 62-2044)	1	1
2.8 150 Ω resistor (1% tolerance, 0.6 W, e.g. Rapid 62-2058	3) 2	1
2.9 330 Ω resistor (1% tolerance, 0.6 W, e.g. Rapid 62-2074	ł) 1	2
2.10 4 mm leads (4 mm plug at each end)	9	9
2.11 Voltmeter (digital, range to \sim 5 V in intervals of 0.01 V)	1	1
2.12 Ammeter (digital, range to 100 mA in intervals of 0.1 mA	N) 1	1
2.13 Masking tape	\checkmark	\checkmark

	Session 1	Session 2
Question 3		
3.1 Retort stand	1	1
3.2 Boss head	1	1
3.3 Clamp	1	1
3.4 Split cork	1	1
3.5 Pendulum bob	1	1
3.6 String/thread (~1 m)	\checkmark	\checkmark
3.7 Stopwatch/stopclock (accurate to 0.01 s)	1	1
3.8 Metre rule	1	1
3.9 Metre rule support (to hold metre rule vertically)	1	1
3.10 90° set square	1	1
3.11 G-clamp	1	1
Question 4		
4.1 Spring balance (range to 10 N in intervals of 0.1 N with zero adjustment facility)	1	1
4.2 Graduated cylinder (200 cm ³ in 2 cm ³ intervals)	1	1
4.3 Slotted masses (50 g, diameter < 30 mm so as to fit inside graduated cylinder)	e 4	6
4.4 Thread (~ 0.5 m)	1	\checkmark
4.5 Retort stand	1	1
4.6 Boss head	1	1
4.7 Clamp	1	1
4.8 Tape (opaque and waterproof, e.g. insulating tape)	\checkmark	\checkmark

Apart from the provision of a suitable writing area, no apparatus is required for this Data Analysis Question.



ADVANCED SUBSIDIARY (AS) General Certificate of Education 2012

Physics

Assessment Unit AS 3

assessing

Practical Techniques (Internal Assessment) Session 1 (pp 3–9) and 2 (10–16)

[AY131] [AY132]

FRIDAY 11 AND MONDAY 14 MAY

CONFIDENTIAL INSTRUCTIONS TO TEACHERS

CONFIDENTIAL INSTRUCTIONS FOR PHYSICS (ADVANCED SUBSIDIARY) PRACTICAL TECHNIQUES (INTERNAL ASSESSMENT)

Confidentiality

To maintain the integrity of the Assessment, **no** question papers or any material pertaining to the Assessment should be publicly released until after the final session of the second day.

General

The Internal Assessment will contain five compulsory questions, of which Section A is made up of four 15-minute experimental tests and Section B is a 30-minute question testing Data Analysis. The total time allowed is 1 hour 30 minutes. The order in which candidates are to take the questions in Section A is to be decided by the Supervisor. Candidates will have access to the apparatus in each experimental task for 13 minutes each, the final two minutes being reserved for adjustment of the apparatus by the Supervisor. During this 2 minute changeover period candidates may write-up anything they have not completed; however, they will not have access to the apparatus. At the end of Section A, candidates should be directed to an area set aside for Section B which consists of one question in which a set of experimental results will be analysed.

Principal Requirements

Golf ball Vernier callipers Scales (electronic, accurate to 0.01 g) Glass beaker (100 ml) Wooden blocks Metre rule

Preparation

The supervisor must record the golf ball mass for each set of scales used as **this will be required for marking purposes**.

The supervisor must also ensure the mean diameter for each golf ball used is 4.23 cm-4.29 cm.

Before Examination

Level the electronic scales and set to zero. Close the vernier callipers. Place the golf ball in the beaker and leave beside the scales. Place the metre rule and blocks of wood alongside the other apparatus.

Action at changeover

Level the electronic scales and set to zero. Close the vernier callipers. Place the golf ball in the beaker and leave beside the scales. Place the metre rule and blocks of wood alongside the other apparatus.

Information required by examiners

None.

Principal Requirements

Cell Cell holder Push-to-make switch 4 mm sockets Component channels (boxes) Diode 75 Ω resistor 150 Ω resistors 330 Ω resistor 4 mm leads Voltmeter Milliammeter Masking tape

Preparation

- (a) Drill two holes into each component channel (at either end) and fit 4 mm sockets.
- (b) Solder the 75 Ω resistor into the channel and label it 'P'. Use masking tape to cover the resistor so that it cannot be seen.
- (c) Solder the 330 Ω resistor into the channel and label it 'R'. Use masking tape to cover the resistor so that it cannot be seen.
- (d) Solder the diode to a 150 Ω resistor so they are in series and solder both into the channel so that the diode anode is attached to the LH socket (viewed from the outside). Solder a second 150 Ω resistor in parallel with the diode and the first 150 Ω resistor. Label this component channel 'Q'. Mark the LH socket '+' and use masking tape to cover the resistors and diode so that they cannot be seen. See **Fig. 2.1**.

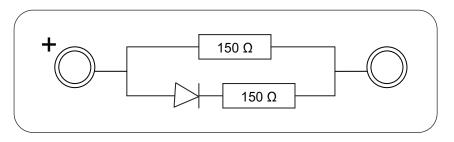


Fig. 2.1

Testing

Ensure that the cell provides a voltage of ~ 1.5 V.

Check that with the switch, component 'P' and component 'R' connected to the cell in series, the current flowing is ~ 3.7 mA and the p.d. across 'P' is ~ 0.27 V.

Connect components 'P', 'R' and 'Q' as shown in **Fig. 2.2** and record the current flowing through 'Q'. **Please note that this value will be required for marking purposes**.

Reverse component 'Q' and ensure that the current flowing through 'Q' has decreased.

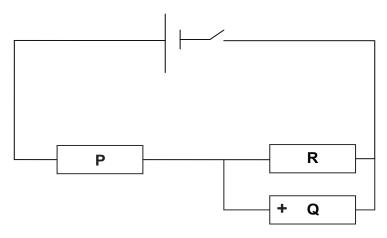


Fig. 2.2

Before Examination

Set up the circuit shown in Fig. 2.3.

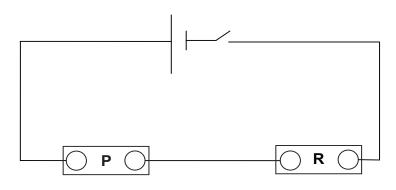


Fig. 2.3

Leave component Q, the milliammeter, the voltmeter and five leads adjacent to the circuit.

Action at changeover

Set up the circuit shown in **Fig. 2.3**.

Leave component Q, the milliammeter, the voltmeter and five leads adjacent to the circuit.

Information required by examiners

None.

Principal Requirements

Retort stand Boss head Clamp Split cork Pendulum bob String/thread (~ 1 m) Stopwatch/stopclock (accurate to 0.01 s) Metre rule Metre rule support 90° set square G-clamp

Preparation

Clamp the retort stand to the bench.

Ensure there is minimal movement in the retort stand when the pendulum is swinging. Ensure the edges of the cork around the split are clean. Arrange the cork in the clamp so that it tapers down to allow the clamp to be opened slig

Arrange the cork in the clamp so that it tapers down to allow the clamp to be opened slightly without the cork falling.

Before Examination

Adjust pendulum length to between 500 mm and 550 mm. Zero the stopwatch/stopclock. Leave the stopwatch/stopclock, set square and metre rule in holder adjacent to the pendulum.

Action at changeover

Adjust pendulum length to between 500 mm and 550 mm.

Zero the stopwatch/stopclock.

Leave the stopwatch/stopclock, set square and metre rule in the support adjacent to the pendulum.

Information required by examiners

None.

Principal Requirements

Spring balance (range to 10 N) Graduated cylinder (200 cm³ in 2 cm³ intervals) Slotted masses (50 g, diameter < 30 mm) Thread (~ 0.5 m) Retort stand Boss head Clamp Tape (e.g. insulating tape)

Preparation

Stack the four 50 g masses and tape tightly together into a cylinder shape.

Ensure the masses are completely covered in tape.

Securely attach the thread to the mass cylinder, using more insulating tape, so that a loop exists see **Fig. 3.1** below (to facilitate adding the cylinder to the spring balance).

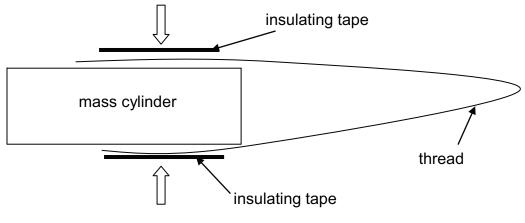


Fig. 3.1

Before Examination

Setup the retort stand, boss head and clamp. Adjust the spring balance so that it reads +0.5 N with no load (zero error). Fill the graduated cylinder with water to the 94 cm³ mark. Place the spring balance on the clamp. Adjust the height of the clamp so that the mass when suspended from the spring balance will be immersed in the water in the graduated cylinder. Leave the stack of four 50g masses on the bench beside the other apparatus.

Action at changeover

Place the spring balance on the clamp. Ensure the spring balance has a zero error of +0.5 N Ensure the water level in the graduated cylinder is 94 cm³. Leave the stack of four 50 g masses on the bench beside the other apparatus.

Information required by examiners

None. 7616.06

Apart from the provision of a suitable working area, no apparatus is required for this Data Analysis Question.

Information required by examiners

None.

Principal Requirements

Table tennis ball Vernier callipers Scales (electronic, accurate to 0.01 g) Glass beaker (100 ml) Wooden blocks Metre rule

Preparation

The supervisor must record the table tennis ball mass for each set of scales used **as this will be required for marking purposes**.

The supervisor must also ensure that the mean diameter for each table tennis ball used is 3.97 cm–4.03 cm.

Before Examination

Level the electronic scales and set to zero.

Close the vernier callipers.

Place the table tennis ball in the beaker and leave beside the scales.

Place the metre rule and blocks of wood alongside the other apparatus.

Action at changeover

Level the electronic scales and set to zero. Close the vernier callipers. Place the table tennis ball in the beaker and leave beside the scales. Place the metre rule and blocks of wood alongside the other apparatus.

Information required by examiners

None.

Principal Requirements

Cell Cell holder Push-to-make switch 4 mm sockets Component channels (boxes) Diode 75 Ω resistor 150 Ω resistor 330 Ω resistors 4 mm leads Voltmeter Milliammeter Masking tape

Preparation

- (a) Drill two holes into each component channel (at either end) and fit 4 mm sockets.
- (b) Solder the 75 Ω resistor into the channel and label it 'P'. Use masking tape to cover the resistor so that it cannot be seen.
- (c) Solder the 150 Ω resistor into the channel and label it 'R'. Use masking tape to cover the resistor so that it cannot be seen.
- (d) Solder the diode to a 330 Ω resistor so they are in series and solder both into the channel so that the diode anode is attached to the LH socket (viewed from the outside). Solder a second 330 Ω resistor in parallel with the diode and the first 330 Ω resistor. Label this component channel 'Q'. Mark the LH socket '+' and use masking tape to cover the resistor and diode so that they cannot be seen. See **Fig. 4.1**.

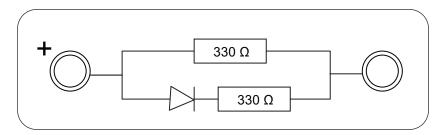


Fig. 4.1

Testing

Ensure that the cell provides a voltage of ~ 1.5 V.

Check that with the switch, component 'P' and component 'R' connected to the cell in series, the current flowing is ~ 6.7 mA and the p.d. across 'P' is ~ 0.5 V.

Connect components 'P', 'R' and 'Q' as shown in **Fig. 4.2** and record the current flowing through 'Q'. **Please note that this value will be required for marking purposes**.

Reverse component 'Q' and ensure that the current flowing through 'Q' has decreased.

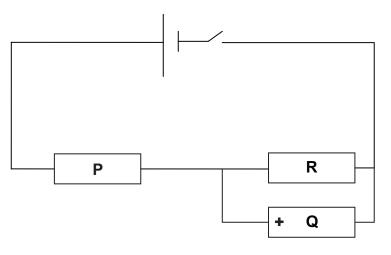


Fig. 4.2

Before Examination

Set up the circuit shown in Fig. 4.3.

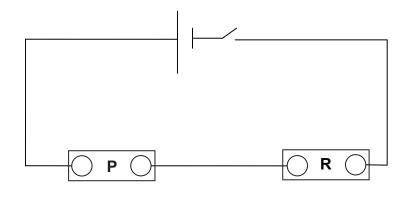


Fig. 4.3

Leave component Q, the milliammeter, the voltmeter and five leads adjacent to the circuit.

Action at changeover

Set up the circuit shown in **Fig. 4.3**.

Leave component Q, the milliammeter, the voltmeter and five leads adjacent to the circuit.

Information required by examiners

None.

Principal Requirements

Retort stand Boss head Clamp Split cork Pendulum bob String/ thread (~ 1 m) Stopwatch/stopclock (accurate to 0.01 s) Metre rule Metre rule support 90° set square G-clamp

Preparation

Clamp the retort stand to the bench.

Ensure there is minimal movement in the retort stand when the pendulum is swinging. Ensure the edges of the cork around the split are clean. Arrange the cork in the clamp so that it tapers down to allow the clamp to be opened slig

Arrange the cork in the clamp so that it tapers down to allow the clamp to be opened slightly without the cork falling.

Before Examination

Adjust pendulum length to between 500 mm and 550 mm. Zero the stopwatch/stopclock. Leave the stopwatch/stopclock, set square and metre rule in holder adjacent to the pendulum.

Action at changeover

Adjust pendulum length to between 500 mm and 550 mm.

Zero the stopwatch/stopclock.

Leave the stopwatch/stopclock, set square and metre rule in the support adjacent to the pendulum.

Information required by examiners

None.

Principal Requirements

Spring balance (range to 10 N) Graduated cylinder (200 cm³ in 2 cm³ intervals) Slotted masses (50 g, diameter < 30 mm) Thread (~ 0.5 m) Retort stand Boss head Clamp Tape (e.g. insulating tape)

Preparation

Stack the six 50 g masses and tape tightly together into a cylinder shape.

Ensure the masses are completely covered in tape.

Securely attach the thread to the mass cylinder, using more insulating tape, so that a loop exists see **Fig. 5.1** below (to facilitate adding the cylinder to the spring balance).

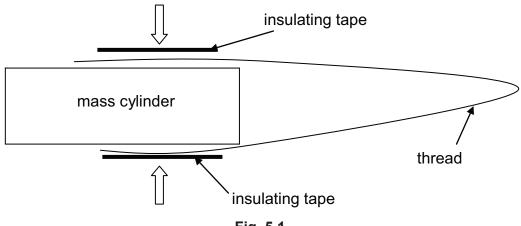


Fig. 5.1

Before Examination

Setup the retort stand, boss head and clamp.

Adjust the spring balance so that it reads +0.5 N with no load (zero error).

Fill the graduated cylinder with water to the 94 cm³ mark.

Place the spring balance on the clamp.

Adjust the height of the clamp so that the mass when suspended from the spring balance will be immersed in the water in the graduated cylinder.

Leave the stack of six 50 g masses on the bench beside the other apparatus.

Action at changeover

Place the spring balance on the clamp. Ensure the spring balance has a zero error of +0.5 N. Ensure the water level in the graduated cylinder is 94 cm³. Leave the stack of six 50 g masses on the bench beside the other apparatus.

Information required by examiners

None. 7616.06

[Turn over

Apart from the provision of a suitable working area, no apparatus is required for this Data Analysis Question.

Information required by examiners

None.